



# Interior

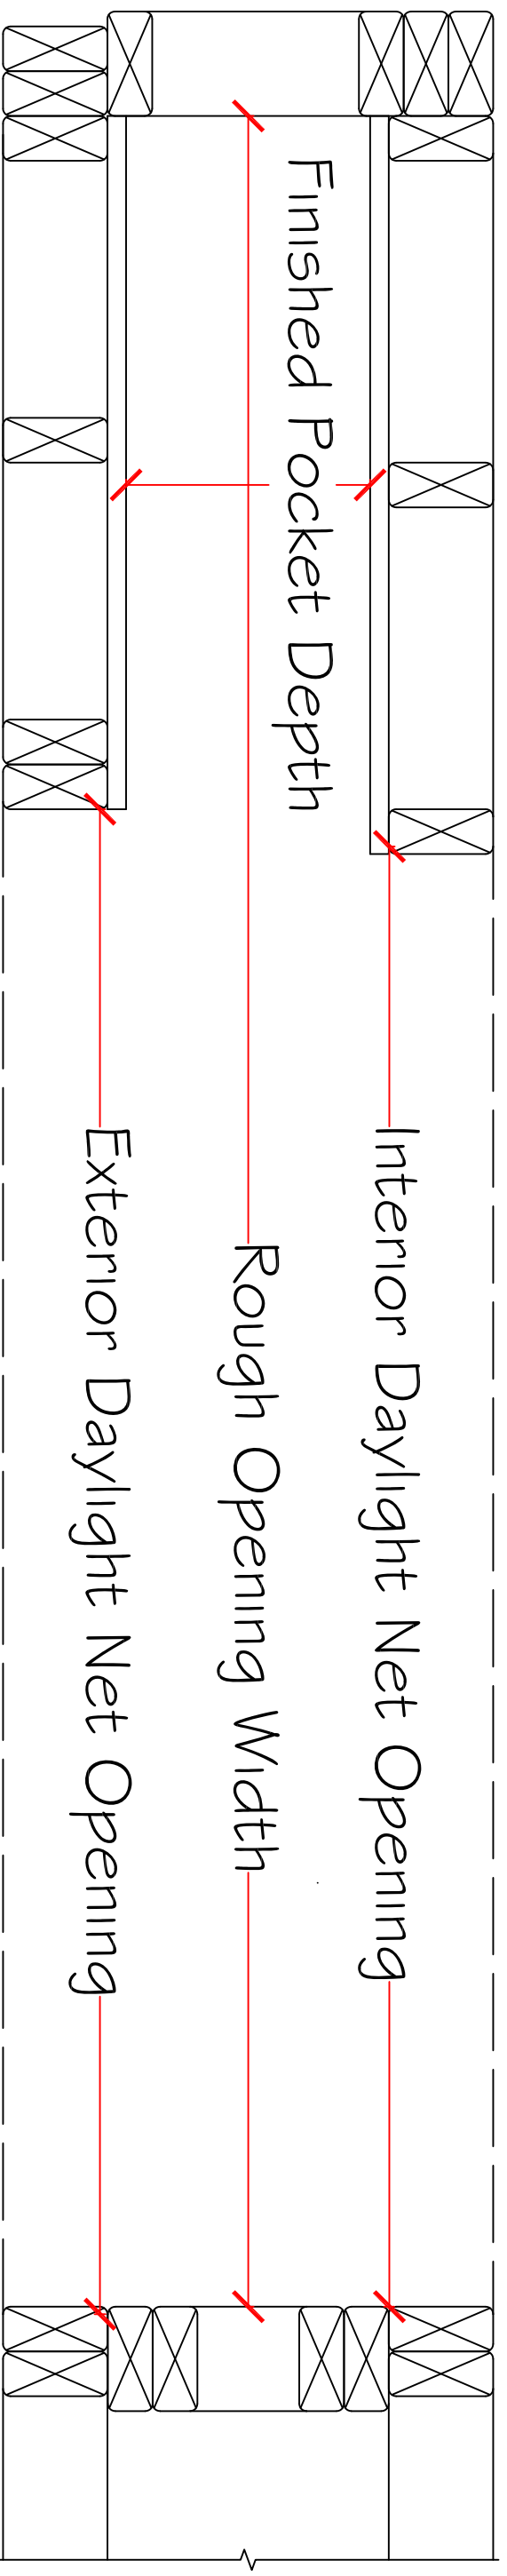

# Exterior

Please Note: The interior wall should not be installed till after the panels have been installed and adjusted.

# Interior

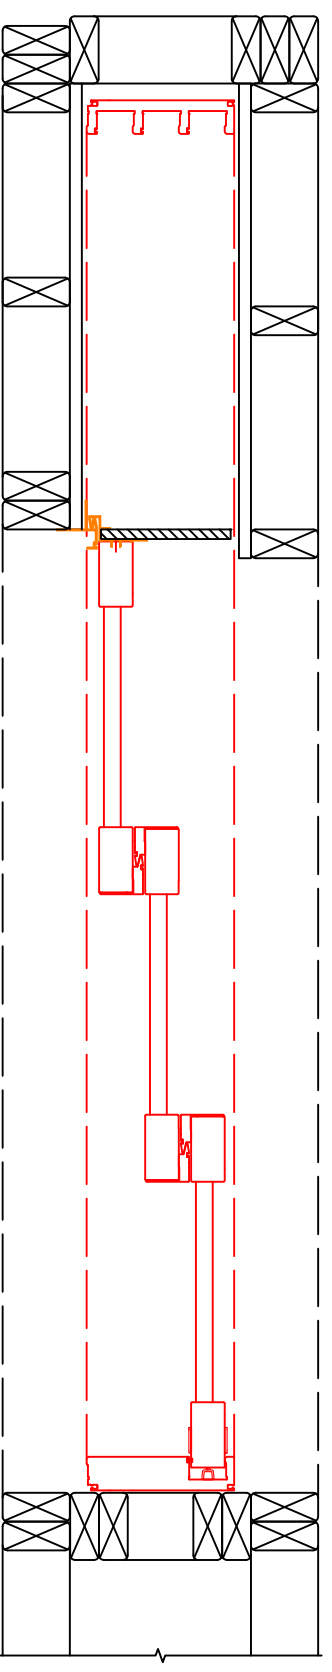

# Exterior

Net Vinyl Frame Size:  $194 \frac{7}{8}$ " x  $95 \frac{1}{2}$ "  
Net Panel Size:  $48 \frac{7}{8}$ " x  $93$ "  
Net Glass Opening  $\pm 1/4$ ":  $42 \frac{1}{8}$ " x  $86 \frac{1}{4}$ "

- \*Rough Opening Width:  $195 \frac{7}{8}$ "
- \*Rough Opening Height:  $96$ "
- \*Exterior Daylight Net Opening:  $142 \frac{1}{4}$ "
- \*Interior Daylight Net Opening:  $140 \frac{3}{4}$ "
- \*\*Finished Pocket Depth: (see notes)  $8 \frac{3}{16}$ "

\*Rough openings and daylight net openings are stud to stud dimensions.

\*\*Finished pocket depth is the net finished dimension after drywall or whatever is spec'd for the project.

Project:

Notes:

File name: WinDor 2300 Pocket - 3 Panel Framing Detail

Layout: 12080 Pocket-XXX

Date: 20160502

Drawn by: D May