



# Interior

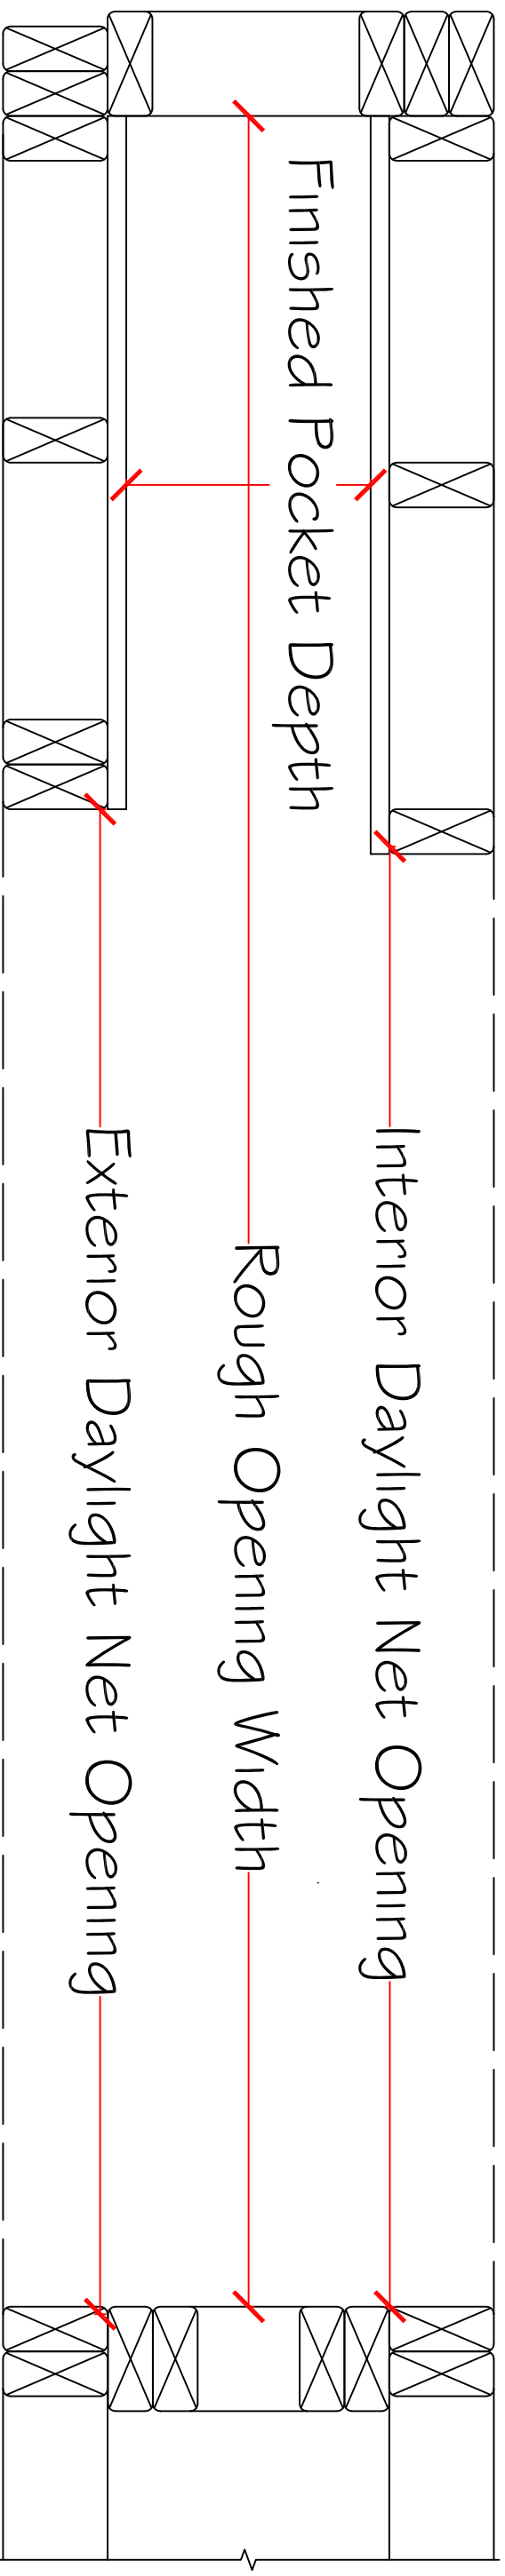

# Exterior

Please Note: The interior wall should not be installed till after the panels have been installed and adjusted.

# Interior

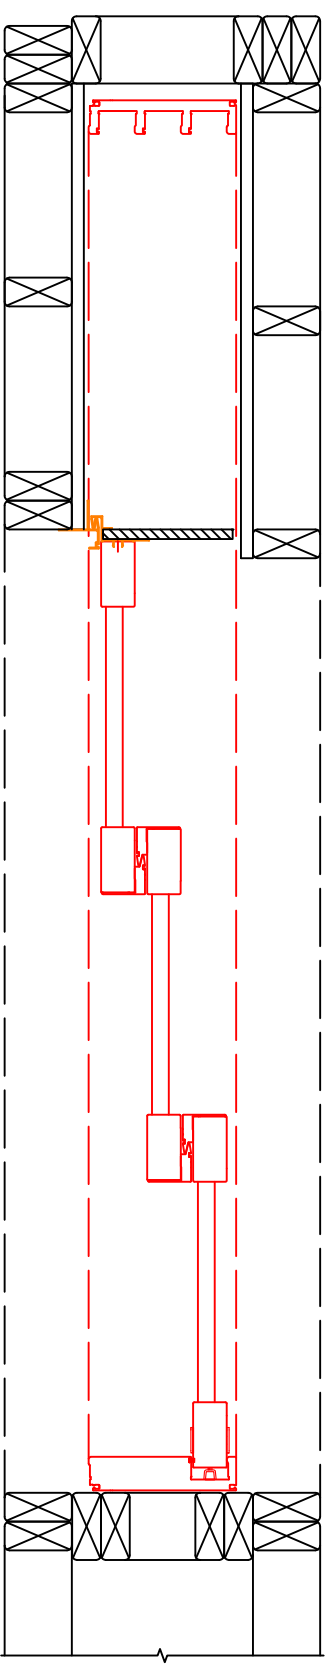

Net Vinyl Frame Size:  $147 \frac{3}{8}$ " x  $95 \frac{1}{2}$ "  
Net Panel Size: 37" x 93"  
Net Glass Opening  $\pm 1/4$ ":  $30 \frac{1}{4}$ " x  $86 \frac{1}{4}$ "

- \*Rough Opening Width:  $148 \frac{3}{8}$ "
- \*Rough Opening Height: 96"
- \*Exterior Daylight Net Opening:  $106 \frac{5}{8}$ "
- \*Interior Daylight Net Opening:  $105 \frac{1}{8}$ "
- \*\*Finished Pocket Depth: (see notes)  $8 \frac{3}{16}$ "

\*Rough openings and daylight net openings are stud dimensions.

\*\*Finished pocket depth is the net finished dimension after drywall or whatever is spec'd for the project.

Project:

Notes:

File name: WinDor 2300 Pocket - 3 Panel Framing Detail

Layout: 9080 Pocket-XXX

Date: 20160502

Drawn by: D May